

METRO AIR FORCE CAGE/CRATE COOLING FAN  
MODEL CCF-1

Instructions for Use

To Operate Your Fan

- Uses 2 x 1.5 volt "D" batteries OR 3 volt adapter (150-250 mA) (not included).
- Remove rear battery cover and insert the batteries as the diagram in the fan shows.
- Rotate the 2 hooks at either end of the fan so that they are pointing straight out.
- Use the Off (O) - Low (L) - High (H) switch to select the desired fan speed.
- Hang the fan on the outside of the pet crate or kennel (so logo faces you).
- The faster the fan is operated, the quicker the batteries will need to be replaced.
- Use the Low (L) setting for maximum battery life.
- When not in use, the 2 hooks at either end of the fan can be closed.

NOTE: The fan will operate on both Low and High Speeds when you are using batteries. However, the fan may only operate on High Speed when an adapter is used. Do not tamper with the circuit board, switches or internal wiring.

REMOVE THE BATTERIES FROM THE FAN, IF IT IS USED WITH AN ADAPTER

