

INSTRUCTIONS	COL. NO.
058541-001-000	1

NEW MODELS ADDED ⇒ FIRST ISSUE	3/00	COLUMN #:	1
104379-000-000 CLIPMASTER HEAD ASSY.	X		
PACKED WITH BLADES	X		
3000 CUTTING STROKES PER MINUTE	X		
HORSES, CATTLE, LLAMAS, GOATS	X		
SINGLE SPEED 510A	X		
VARIABLE SPEED 610A	X		

MODEL OR SERVICE NO. COLUMN	1	4	5	6	7	8	9	10	11
-----------------------------	---	---	---	---	---	---	---	----	----

THESE HEAD ASSEMBLIES ARE
INTER-CHANGEABLE WITH ALL
"CLIPMASTER" MOTOR
ASSEMBLIES.

INDEX NO.	PART NUMBER	* WAS PART NO.	DESCRIPTION	Basic Parts	078150-513-000	QUANTITY REQUIRED												
1	042883-000-000		GEAR ASY	1														
2	044910-000-000		VEN-GEAR-CRANKSHAFT	1														
3	044911-005-000		COVER ASY	1														
4	044915-000-000		SCREW-MS	2														
5	044920-005-000		FRONT CASE ASSEMBLY	1														
6	044993-000-000		INSULATOR-GEAR	1														
8	055702-000-000		BLOCK-SLIDE	1														
9	055703-000-000		SPACER	2														
10	055712-005-000		YOKE ASY - SEE NOTE 1	1														
11	055714-000-000		SCREW	2														
12	055715-500-000		BLADE BOTTOM-TITANIUM	1														
13	055716-500-000		BLADE TOP-TITANIUM	1														
14	055717-000-000		SCREW	2														
15	104153-000-000		CRANKSHAFT-CLIPMASTER	1														
16	104331-000-000		PLUG-GREASE	1														
17	104362-005-000		BUSHING-ASSY-CLIPMASTER	1														
18	104460-005-000		TENSION PLATE ASY	1														
19	042106-005-000		SCREW-MS	4														
20	042139-005-000		SCREW-MS	2														
21	104480-001-000		NAMEPLATE CLIPMASTER SPARE HD	1														

NOTE 1


IF SERVICER HAS THE PROPER EQUIPMENT TO DISASSEMBLE & ASSEMBLE YOKE ASSEMBLY, THE INDIVIDUAL COMPONENTS ARE AVAILABLE SEPARATELY. CONTACT OSTER PRODUCT SERVICE FOR DETAILS.

MANUAL: STEWART

SECTION: CLIPPERS

CONTINUED ON REVERSE SIDE

PAGE: 209

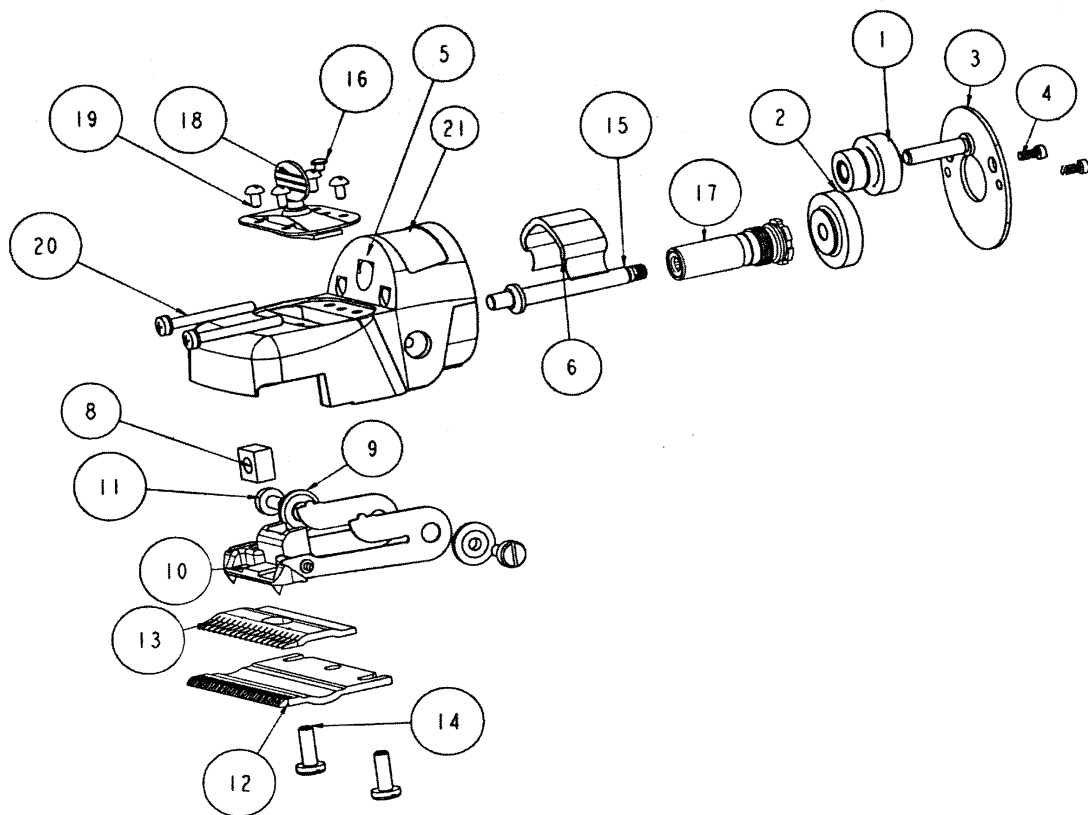

NOTE: NUMBERS SHOWN ON DRAWING ARE INDEX NUMBERS ONLY. ORDER PARTS BY CORRECT PART NUMBER.