


# Instruction for 1901SS Cartridge Fired Projector



To Load Projector  
Remove Blank Adaptor by depressing "Breaching Lever" See above




Blank Adaptor  
\*Patent Pending

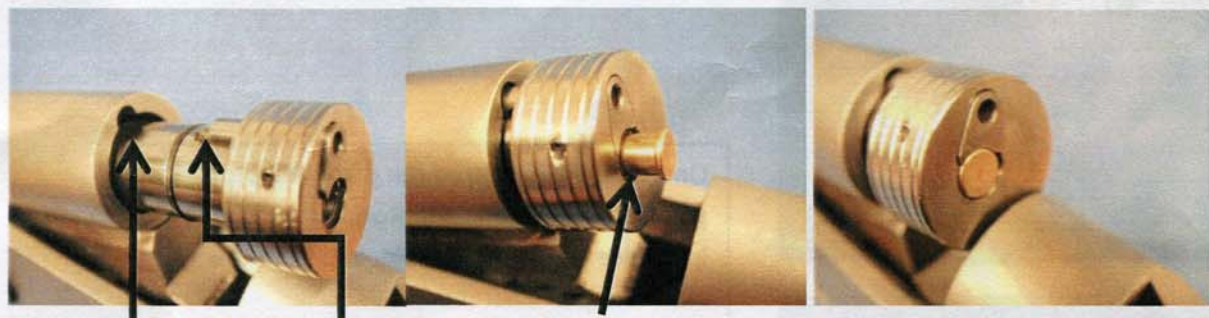

Line Notch in Barrel with Extractor Pin in Blank Adaptor


Insert Power Load and Push Blank Adaptor into Barrel making sure notch and pin are aligned

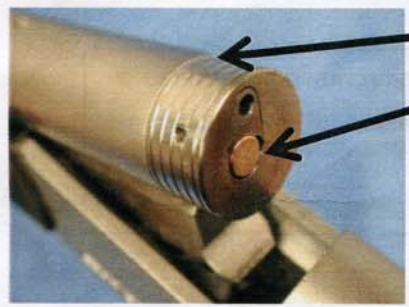


Both Power Load and Blank Adaptor must be flush Before closing barrel of Projector



To expel Power Load from adaptor follow the steps below

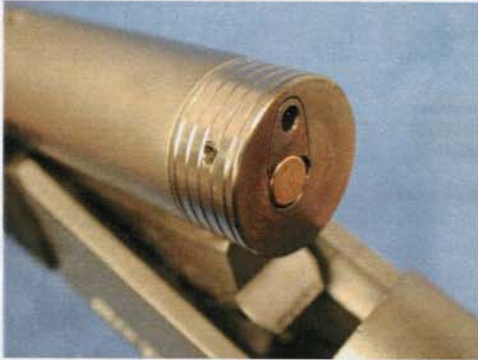

Depress Breach lever to expose Blank Adaptor  
View of barrel open with blank adaptor in firing position.

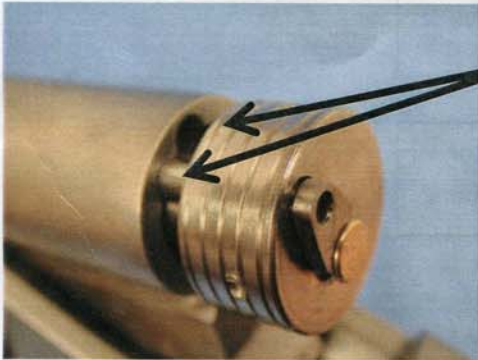

Pull back on blank adaptor until the pin is out of the slot in the barrel and rotate adaptor counterclockwise to 10:00 or until pin is free of slot in barrel.



Once you have rotated the Blank Adaptor push in on the blank adaptor and the power load case can easily be removed from the blank adaptor chamber.



Release the adaptor and remove power load from adaptor. Extractor will return to position in adaptor.