



**Universal Walk-In Pen  
Extension Kit  
Assembly Instructions**




**Important Notes:**

Lay out all components prior to start of assembly. A flat, level surface is recommended for assembly.

If any components are missing or damaged, do not return to retailer. Please call Rugged Ranch Products at: 760-734-3748

Visit our website to see our complete line of products.

[www.ruggedranch.net](http://www.ruggedranch.net)

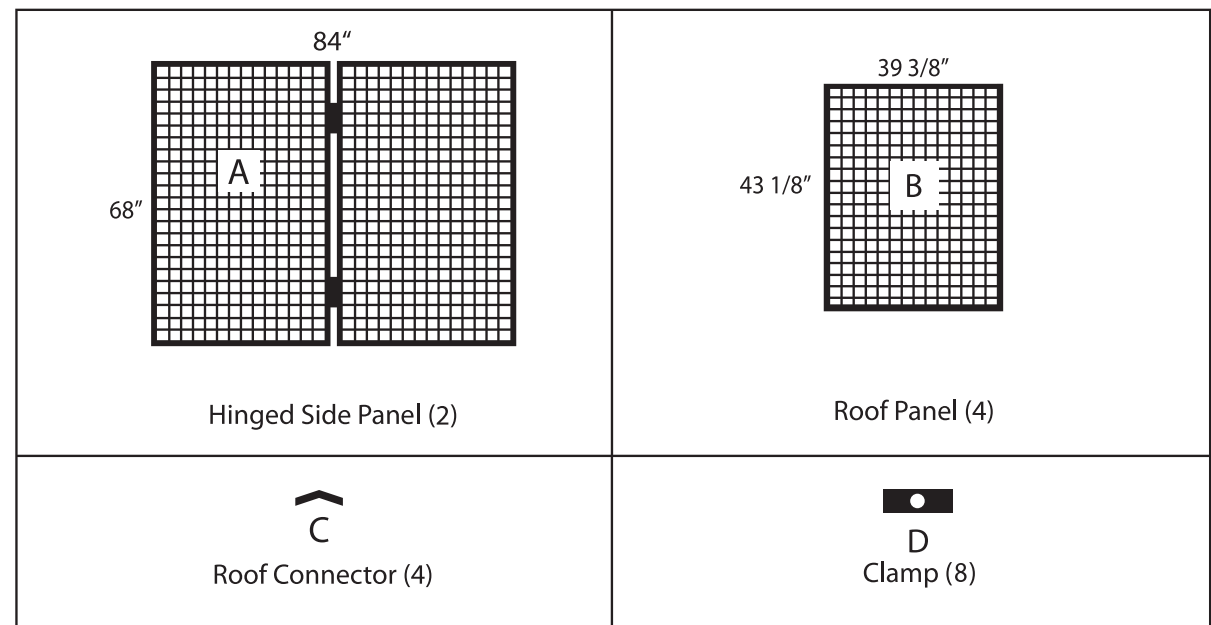

1. When utilizing your extension kit, the roof panels must not have the middle roof clamps connected. If adding to an existing Walk-in Pen, the middle roof clamps must be removed and the roof panels positioned to fit snugly together. **\*\*Only attach the clamps that mount to the top of the cage, not the clamps in the center of the roof or the roof will extend past the front and back of the cage.\*\***

2. Add Side Panels (A) to your pre-existing Side Panels using 2 Clamps (D) per panel.
3. Add the front panel from your existing pen to the end of your newly extended pen.
4. Add Roof panels (B), connecting with Roof Connectors (C) where the panels meet in the center of the pen. You will not need clamps to hold the roof panels together when utilizing the Extension Kit. All Roof Panels (B) will snugly fit together in the center of the pen.

**Don't forget to complete your Universal Walk-In Pen by adding the optional Wooden Chicken Hutch or Dog House. Both accessories attach outside the pen via knock-out, back panel to save room inside the pen.**

