


# HATCHBAG® PET NET

## Pet Net Installation *Please Read Before Proceeding*

The Hatchbag® PET NET is designed to be mounted in your vehicle immediately behind the front row of seats or in limited models, behind the 2nd seat. The PET NET will not fit correctly if mounted behind the rear passenger seat in some vehicles. To fully protect your vehicle from the wear and tear of pets, combine your PET NET with a custom fitted Hatchbag® cargo liner.

The PET NET is held in place by a fastening system called a Dual Lock Hardware Kit. The kit consist of parts that work like velcro, but are made of a hard plastic. You should have six each of dual lock squares, dual lock circles with cord and barrel locks. You should also have the net with six eyelets (3 on each side). There are no tools needed for this installation.

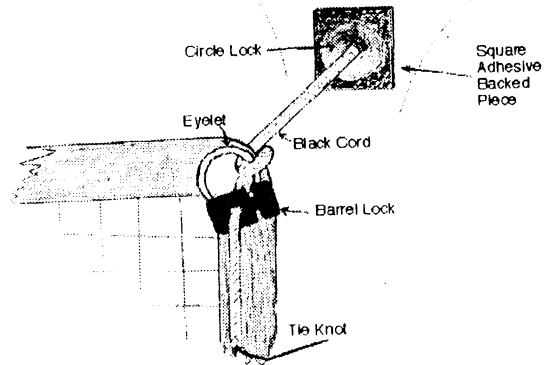

### To Install Your New Pet Net

**IMPORTANT:** It is critical that you clean the molding at each location you will be applying the adhesive backed dual lock square. Any dirt, dust or worst of all dash dressing (that liquid stuff used to make the molding and tires look shiny - we can't use their name) will cause the adhesive to fail over time. Spot removers are ideal. However, any cleaner that can breakdown silicones and not leave soapy residues should work.

1. Thread each black cord in your hardware kit through each eyelet on the net twice. Then thread a small barrel lock on each cord. You should have a circle on one side and a barrel lock on the other with a loop of cord around the eyelet. Tie a knot at the end of the cord and slide the barrel lock back down to the knot.
2. Next, the square adhesive backed pieces will be mounted on the molded roof supports that separate your windows. Remember to clean the surface as instructed and let dry completely before applying adhesive backed squares. Start at the top by removing backing and adhering a square piece at the highest point on the vertical roof support. Repeat for the other side of the vehicle.
3. Connect the top two cords you have installed on your net by attaching the circles to the squares. Adjust both sides equally so that the top of the net is tight across your vehicle. Secure in position with barrel locks.
4. With the top in position, next locate where the bottom squares will be mounted. Adhere square adjacent to eyelet. Connect circle pieces and adjust as before, repeat the sequence for the middle Dual Locks.

**IMPORTANT:** Allow the adhesive to cure overnight before any excessively strong tension is applied to the dual lock squares. The bond becomes 50% stronger within 24 hours.

To detach the net, pry the circles from the squares with a screwdriver or similar tool. Do not remove squares from molding if you intend to reattach the Pet Net. **Do not remove dual lock circles for the first 24 hours while the adhesive cures.**

**NOTE:** The PET NET is designed to aid in restraining your pet from gaining access to the drivers compartment. While most pets will be restrained by the PET NET, due to the wide range of pet behavior it is strongly recommended that your pet never be left unattended.

## QUESTIONS? CALL 800-869-9091