

Directions For Attaching "Super Gripp Pads" To Your Stirrups,


1. Center pad on the inside base of stirrup, nylon side down.



This first tie will hold the pad in place while the remaining ties are inserted in the same manner as described above.

NOTE: Before completing next step, turn stirrup over and make sure that the pad is centered side to side.

3. Start in the center and tighten each tie, working your way toward the outside ties. Pull the end of the tie away from you to tighten, and toward you to pull head back before tightening again.

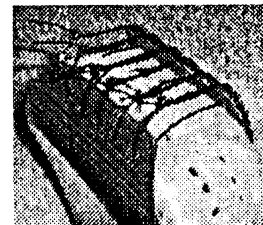


2. Wrap ends of pad toward bottom of stirrup. Turn stirrup upside down and make sure the holes on either end of pad are aligned. With either row of holes facing you, thread a plastic tie through one of the center holes, across bottom of stirrup, and through corresponding hole on other end. Loop end of tie back toward you, and LOOSELY insert into head of tie.



Repeat this step until ends of pad come together.

Cut off ends of ties with wire snips or scissors.

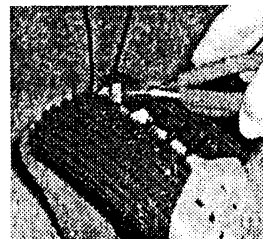

NOTE: Tie must be inserted with the ridged side up, and the head pointing down.

* To smooth fasteners after cutting, trim with toenail clippers.

NOTE: If using pliers to tighten ties, do not grip near the head, in case pliers snap the tie off. It is best to put on gloves and pull by hand!