


Regular or Slim Sole? Measure to Find Out

1. After a fresh trim measure hoof LENGTH from buttress line to toe as per the diagram below.
2. Measure hoof WIDTH across the widest part of the hoof.
3. If the LENGTH exceeds the WIDTH by 10 mm (3/8") this hoof needs a SLIM sole.

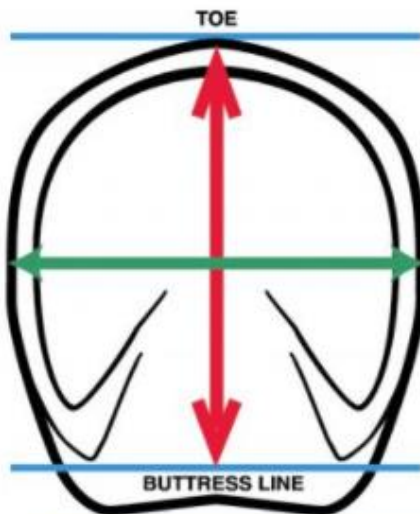

SLIM SIZE CHART

Length	CLB SIZE	Width
62mm - 71mm 2 ³ / ₈ " - 2 ¹¹ / ₁₆ "	M1 Slim	51mm - 61mm 2" - 2 ⁵ / ₁₆ "
72mm - 82mm 2 ³ / ₄ " - 3 ¹ / ₈ "	M2 Slim	62mm - 72mm 2 ³ / ₈ " - 2 ³ / ₄ "
83mm - 92mm 3 ³ / ₁₆ " - 3 ⁵ / ₈ "	M3 Slim	73mm - 82mm 2 ¹³ / ₁₆ " - 3 ¹ / ₈ "
93mm - 102mm 3 ¹¹ / ₁₆ " - 4"	M4 Slim	83mm - 92mm 3 ³ / ₁₆ " - 3 ⁵ / ₈ "

CLB SLIM SOLE HOOFBOT: Fits a more oval hoof where the LENGTH exceeds the WIDTH by more than 10mm (3/8")