

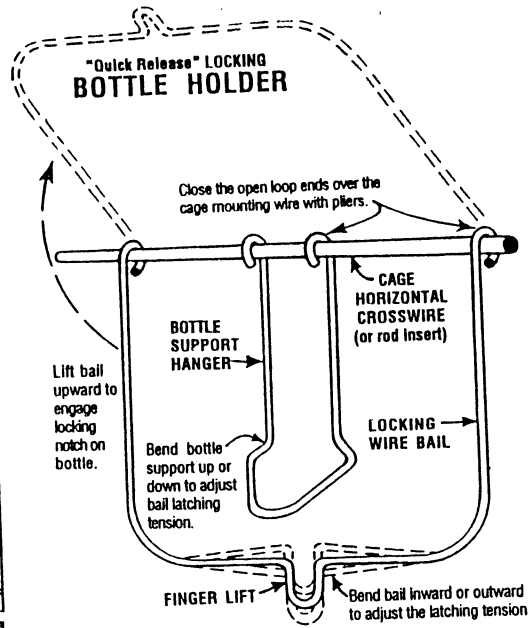
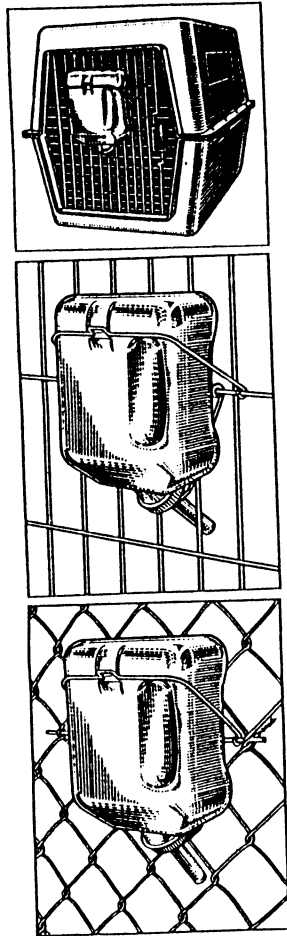
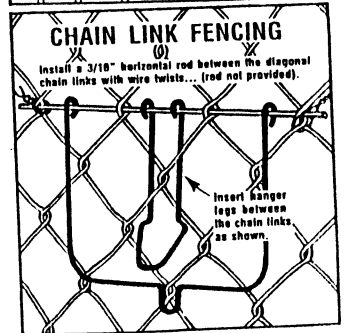


FITS MOST CAGES

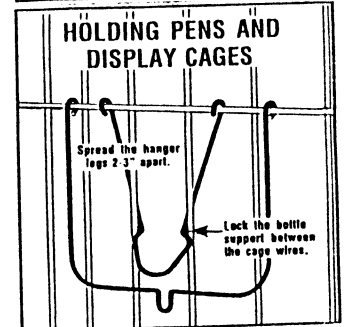

IMPORTANT NOTICE:

- Use the Bottle Support Hanger!
- Do not install your bottle where exposed daily to sunshine.
- After filling, depress the control ball and let water trickle out until vacuum lock develops.

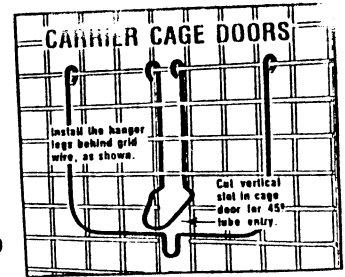

INSTALLATION AND OPERATION: Your LIXIT Dog Waterer comes with a two-piece wire bottle holder for installation on carrier cages, holding pens, display cages, and chain link fencing. When properly installed, the support hanger and wire bail lock the bottle securely in position. The "quick release" locking bail fits into a special notch molded in the bottle. To release the bail, press inward on the molded notch below the bail finger lift. **The Bottle support hanger carries the full weight of the bottle and must be used for installation.** This avoids stress on the cap seal and minimizes risk of leakage from loss of vacuum. The locking bail must be adjusted just enough to keep the bail locked in position without deforming the bottle or exerting leverage on the cap/bottle seal. This gentle latching force can be achieved in two easy ways, 1) by bending the 45-degree bottle support hanger upward or downward (which raises or lowers the bottle), or 2) by bending the front of the bail inward or outward, as illustrated above.

WITH CARRIER CAGES: You must cut a vertical slot in the wire grid door with a wire cutter, to install the bottle support hanger and provide proper 45-degree tube entry. Insert the hanger legs through the slot and hook the loop ends up over a higher horizontal grid wire. Attach the wire bail to the same horizontal wire, as illustrated. Adjust the bail latching tension as noted above.

WITH HOLDING PENS AND DISPLAY CAGING: Use any convenient horizontal cross wire to attach the bottle support hanger and locking wire bail. On holding pens, you may have to spread the hanger legs 2"-3" apart to lock the 45-degree bottle support securely between the vertical cage wires. Also, for small dogs, you may have to install a separate horizontal support rod (such as 11"-12" length of 3/16" or 1/4" metal rod) for mounting the bottle at an appropriate height. Use nylon ties, or wire twists, to securely attach this separate support rod. This extra support rod, if needed is available at local hardware stores, or can be ordered factory direct.

WITH CHAIN LINK FENCE: You will have to insert a short 11"-12" steel or aluminum rod horizontally between the chain links to install the bottle holder. Attach the rod securely with nylon ties or wire twists. This separate support rod serves as a horizontal cross wire for mounting the bottle support hanger and locking wire bail. Be sure the hanger legs are inserted between the chain links, as illustrated. This needed support rod is available at local hardware stores, or can be ordered factory direct.

LIXIT ANIMAL CARE PRODUCTS

P.O. BOX 2580 NAPA, CA 94558 • SALES: 707-252-1622 • FAX: 707-252-1627

U.S. and Foreign Patents Pending © 1993 Lixit Corporation