




Easyboot & EasyShoe Size Charts

How to Measure

The biggest determining factor in EasyCare hoof boot* and EasyShoe success is fit. Always measure as soon as possible after a fresh trim. Waiting to take measurements can result in a poor fit.

Check the product size chart before starting your measurements. If the sizes are shown in millimeters only, be sure to measure in millimeters. Measuring in inches and converting to millimeters will render the measurement process inaccurate.

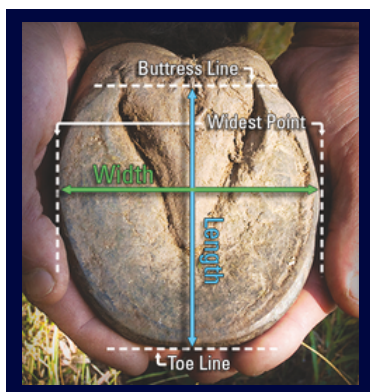

1. Measure the width of the hoof across the bottom at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
3. Compare your measurements with the appropriate size chart. Please note: each model has its own unique size chart.
4. Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size. If the width and length measurements are more than one size apart, your selected model is not recommended. ** Check your measurements against an alternative product in the EasyCare line - another model may accommodate your horse's hoof shape better.

* Hoof boots should be snug before tightening. After tightening, the boot should be a close fit around the hoof wall. You should not be able to turn or twist the boot.

** If the hoof measurements are more than one size apart in length and width, please call an EasyCare Product Specialist at 800.447.8836.

Chart Reference

PERFORMANCE	
Easyboot Epic	1
Easyboot Flip Flop	2
Easyboot Love Child (LC)	3
Easyboot Glove Soft	4
Easyboot Glue-On	4
PLEASURE	
Easyboot Back Country	4
Easyboot Mini	7
Old Mac's G2	8
Easyboot Sneaker	9
Easyboot Trail & Trail Original	8
THERAPY	
Easyboot Remedy	10
Easyboot Remedy Ultimate	10
Easyboot Cloud	11
Easyboot Rx	12
Easyboot Rx2	13
Easyboot Zip	14
EASYSHOE	
EasyShoe Compete	15
EasyShoe Flex Heart Bar	16
EasyShoe Performance & N/G	17
EasyShoe Sport	18
EasyShoe 3D	19
EasyShoe Speed	20
EasyShoe Race	21
EasyShoe Roller	22
EasyShoe Adapter	23
EasyShoe One Glue	24
EasyShoe One Nail	25
EasyShoe Versa Grip, Gold, Light	26
EasyShoe Versa Grip Glue, Octo	27
EasyShoe Versa Grip Wedge	28
EasyShoe Versa Grip Rocker	29

CHART 1: Easyboot Epic

Size	Width (in)	Length (in)	Width (mm)	Length (mm)
Pony	3 3/16 - 3 3/8	3 3/8 - 3 5/8	78-85	85-92
000	3 3/8 - 3 13/16	3 5/8 - 4 3/16	86-97	93-105
00	3 13/16 - 4 3/8	4 3/16 - 4 5/8	98-110	106-117
0	4 3/8 - 4 9/16	4 5/8 - 4 15/16	111-116	118-124
1	4 9/16 - 4 7/8	4 15/16 - 5 1/8	117-123	125-130
2	4 7/8 - 5 1/8	5 1/8 - 5 9/16	124-130	131-140
3	5 1/8 - 5 1/2	5 9/16 - 5 15/16	131-139	141-150
4	5 1/2 - 5 15/16	5 15/16 - 6 7/16	140-150	151-163
5	5 15/16 - 6 7/16	6 7/16 - 6 7/8	151-163	164-174
6	6 7/16 - 6 7/8	6 7/8 - 7 7/16	164-175	175-188
7	6 7/8 - 7 9/16	7 7/16 - 7 3/4	176-192	189-195

CHART 2: Easyboot Flip Flop

Size	Width (mm)	Length (mm)
0	104-107	Trim to size
0.5	108-111	Trim to size
1	112-115	Trim to size
1.5	116-119	Trim to size
2	120-123	Trim to size
2.5	124-127	Trim to size
3	128-131	Trim to size

CHART 3: Easyboot Love Child (LC)

Size	Width (mm)	Length (mm)
0	104-107	111-118
0.5	108-111	116-123
1	112-115	121-128
1.5	116-119	126-133
2	120-123	132-139
2.5	124-127	134-141
3	128-131	139-146
3.5	132-135	142-149
4	136-139	145-152

CHART 4: Easyboot Glove Soft, Back Country, Glue-On

Regular Sizes		
Size	Width (mm)	Length (mm)
00	96-99	106-109
00.5	100-103	110-113
0	104-107	114-117
0.5	108-111	118-121
1	112-115	122-125
1.5	116-119	126-129
2	120-123	130-133
2.5	124-127	134-137
3	128-131	138-141
3.5	132-135	142-145
4	136-139	146-149
4.5	140-143	150-153
5	144-147	154-157
Wide Sizes		
Size	Width (mm)	Length (mm)
0W	114-117	114-117
0.5W	118-121	118-121
1W	122-125	122-125
1.5W	126-129	126-129
2W	130-133	130-133
2.5W	134-137	134-137
3W	138-141	138-141

Always measure in millimeters as directed in our "How to Measure" guide.

A Fit Kit is available to ensure correct sizing.

CHART 7: Easyboot Mini

Size	Width (mm)	Length (mm)
Mini	44-49	49-54
Mini 1	50-55	55-64
Mini 2	56-65	65-72
Mini 3	66-76	73-86

CHART 8: Old Mac's G2, Easyboot Trail & Trail Original

Size	Width (in)	Length (in)	Width (mm)	Length (mm)
0	3 15/16 - 4 1/8	4 1/8 - 4 15/16	100-105	105-110
1	4 1/8 - 4 5/16	4 5/16 - 4 1/2	105-110	110-115
2	4 5/16 - 4 1/2	4 1/2 - 4 3/4	110-115	115-120
3	4 1/2 - 4 3/4	4 3/4 - 4 15/16	115-120	120-125
4	4 3/4 - 4 15/16	4 15/16 - 5 1/8	120-125	125-130
5	4 15/16 - 5 1/8	5 1/8 - 5 5/16	125-130	130-135
6	5 1/8 - 5 5/16	5 5/16 - 5 1/2	130-135	135-140
7	5 5/16 - 5 1/2	5 1/2 - 5 11/16	135-140	140-145
8	5 1/2 - 5 11/16	5 11/16 - 5 15/16	140-145	145-150
9	5 11/16 - 5 15/16	5 15/16 - 6 1/8	145-150	150-155
10	5 15/16 - 6 1/8	6 1/8 - 6 5/16	150-155	155-160
11	6 1/8 - 6 1/2	6 5/16 - 6 11/16	155-165	160-170
12	6 1/2 - 6 7/8	6 11/16 - 7 1/8	165-175	170-180

CHART 9: Easyboot Sneaker

Regular Sizes		
Size	Width (mm)	Length (mm)
00	90-100	95-105
0	100-110	105-115
1	110-120	115-125
2	120-130	125-135
3	130-140	135-145
4	140-150	145-155
5	150-160	155-165
Narrow Sizes		
Size	Width (mm)	Length (mm)
00	80-90	95-105
0	90-100	105-115
1	100-110	115-125
2	110-120	125-135
3	120-130	135-145
4	130-140	145-155
5	140-150	155-165

CHART 10: Easyboot Remedy & Remedy Ultimate

Size	Width (in)	Width (mm)
Medium	Up to 4 3/4"	Up to 120.5
Large	Up to 6 1/2"	Up to 160

CHART 11: Easyboot Cloud

Size	Width (in)	Length (in)	Width (mm)	Length (mm)
00	3 1/2 - 3 7/8	4 - 4 3/8	89-99	102-112
0	3 7/8 - 4 1/4	4 3/8 - 4 5/8	99-108	112-118
1	4 1/4 - 4 7/8	4 5/8 - 5 1/8	108-124	118-131
2	4 7/8 - 5 1/4	5 1/8 - 5 3/8	124-133	131-137
3	5 1/4 - 5 7/8	5 3/8 - 5 7/8	133-149	137-150
4	5 7/8 - 6 1/4	5 7/8 - 6 1/4	149-159	150-159
5	6 1/4 - 6 11/16	6 1/4 - 6 11/16	159-170	159-170
6	6 11/16 - 6 15/16	6 11/16 - 6 15/16	170-177	170-177
7	6 15/16 - 7 3/8	6 15/16 - 7 3/8	177-188	177-188
8	7 3/8 - 7 1/2	7 3/8 - 7 7/8	188-191	188-201

CHART 12: Easyboot Rx

Size	Width (in)	Length (in)	Width (mm)	Length (mm)
00	3 13/16 - 4 3/8	4 3/16 - 4 5/8	98-110	106-117
0	4 3/8 - 4 9/16	4 5/8 - 4 15/16	111-116	118-124
1	4 9/16 - 4 7/8	4 15/16 - 5 1/8	117-123	125-130
2	4 7/8 - 5 1/8	5 1/8 - 5 9/16	124-130	131-140
3	5 1/8 - 5 1/2	5 9/16 - 5 15/16	131-139	141-150
4	5 1/2 - 5 15/16	5 15/16 - 6 7/16	140-150	151-163
5	5 15/16 - 6 7/16	6 7/16 - 6 7/8	151-163	164-174
6	6 7/16 - 6 7/8	6 7/8 - 7 7/16	164-175	175-188
7	6 7/8 - 7 9/16	7 7/16 - 7 3/4	176-192	189-195

CHART 13: Easyboot Rx2

Size	Width (mm)	Length (mm)
000	70-80	80-90
00	80-90	90-100
0	90-100	100-110
1	100-110	110-120
2	110-120	120-130
3	120-130	130-140
4	130-140	140-150
5	140-150	150-160
6	150-160	160-170
7	160-170	170-180

CHART 14: Easyboot Zip

Size	Width (in)	Length (in)	Width (mm)	Length (mm)
0	3 - 3 13/16	3 - 3 13/16	77-97	77-97
1	3 7/8 - 4 11/16	3 7/8 - 4 11/16	98-119	98-119
2	4 3/4 - 5 5/16	4 3/4 - 5 5/16	120-136	120-136
3	5 3/8 - 6 3/8	5 3/8 - 6 3/8	137-162	137-162
4	6 7/16 - 7 1/16	6 7/16 - 7 1/16	163-180	163-180

CHART 15: EasyShoe Compete

Size	Width (mm)	Length (mm)
0	95-118	111-118
1	105-125	119-127
2	115-135	128-136
3	125-145	137-143

CHART 16: EasyShoe Flex Heart Bar

Size	Width (mm)	Length (mm)
0	100-113	127
1	106-121	135
2	110-129	144
3	116-137	153
4	122-143	160
5	124-148	168
6	134-158	175

CHART 17: EasyShoe Performance & Performance N/G

Size	Width (mm)	Length (mm)
0	105-111	108-115
1	112-119	116-123
2	120-127	124-131
3	128-135	132-140
4	136-143	141-149
5	144-152	150-159

CHART 18: EasyShoe Sport

Size	Width (mm)	Length (mm)
0	100-110	114-117
0.5	105-115	118-121
1	110-120	122-125
1.5	115-125	126-129
2	120-130	130-133
2.5	125-135	134-137
3	130-140	138-141

CHART 19: EasyShoe 3D

Front Sizes		
Size	Width (mm)	Length (mm)
118F	112-118	128
122F	116-122	132
126F	120-126	136
130F	124-130	140
134F	128-134	145
Hind Sizes		
Size	Width (mm)	Length (mm)
110H	104-110	124
114H	108-114	128
118H	112-118	133
122H	116-122	137
126H	120-126	142

CHART 20: EasyShoe Speed, Speed Metal, & Speed Metal Trac

Front Sizes		
Size	Width (mm)	Length (mm)
114F	108-114	123
118F	112-118	128
122F	116-122	132
126F	120-126	136
130F	124-130	140
134F	128-134	145
138F	132-138	150
142F	136-142	154
146F	140-146	158
Hind Sizes		
Size	Width (mm)	Length (mm)
106H	100-106	119
110H	104-110	124
114H	108-114	128
118H	112-118	133
122H	116-122	137
126H	120-126	142
130H	124-130	146
134H	128-134	151

CHART 21: EasyShoe Race

EasyShoe Race Wedge sizes correspond to shoe size.

Size	Width (mm)	Length (mm)
3	114-118	125
4	118-122	128
5	122-126	130
6	126-131	136
7	131-136	142
8	136-142	148

CHART 22: EasyShoe Roller

EasyShoe Roller Wedge sizes correspond to shoe size.

Size	Width (mm)	Length (mm)
3	98-104	110
4	104-110	115
5	110-115	120
6	115-121	127
7	121-127	135
8	127-133	140
9	133-138	145
10	138-145	150
11	145-152	158

CHART 23: EasyShoe Adapter

Accessories correspond to shoe size
(Wedge, Clog, Roller, and Tenotomy.)

Size	Width (mm)	Length (mm)
118F	112-118	128
122F	116-122	132
126F	120-126	136
130F	124-130	140
134F	128-134	145

CHART 24: EasyShoe One Glue

EasyShoe One Glue is elongated to fit both fronts & hinds.
Use rasp or grinder to adjust length.

Front Sizes		
Size	Width (mm)	Length (mm)
114F	108-114	133
118F	112-118	137
122F	116-122	141
126F	120-126	146
130F	124-130	151
134F	128-134	155
138F	132-138	159

CHART 25: EasyShoe One Nail

Front Sizes		
Size	Width (mm)	Length (mm)
118F	112-118	131
122F	116-122	135
126F	120-126	139
130F	124-130	143
134F	128-134	148
138F	132-138	153
Hind Sizes		
Size	Width (mm)	Length (mm)
114H	108-114	131
118H	112-118	136
122H	116-122	140
126H	120-126	145
130H	124-130	149
134H	128-134	154

CHART 26: EasyShoe Versa Grip & Versa Grip Light (sizes 102-206)
Versa Grip Gold (sizes 102-170 only)

Front Sizes			
Size	Width (mm)	Length (mm)	Thickness (mm)
102F	96-102	113	16
106F	100-106	117	16
110F	104-110	122	16
114F	108-114	126	16.2
118F	112-118	131	16.2
122F	116-122	135	16.2
126F	120-126	139	16.2
130F	124-130	143	16.2
134F	128-134	148	16.2
138F	132-138	153	16.7
142F	136-142	157	16.7
146F	140-146	161	16.7
150F	144-150	166	17.2
154F	148-154	170	17.2
158F	152-158	175	17.2
162F	156-162	179	17.8
166F	160-166	183	17.8
170F	164-170	188	17.8
174F	168-174	192	
178F	172-178	196	
182F	176-182	200	
186F	180-186	205	
190F	184-190	209	
194F	188-194	214	
198F	192-198	218	
202F	196-202	222	
206F	200-206	227	

Hind Sizes			
Size	Width (mm)	Length (mm)	Thickness (mm)
102H	96-102	118	16
106H	100-106	122	16
110H	104-110	127	16
114H	108-114	131	16.2
118H	112-118	136	16.2
122H	116-122	140	16.2
126H	120-126	145	16.2
130H	124-130	149	16.2
134H	128-134	154	16.2
138H	132-138	159	16.7
142H	136-142	163	16.7
146H	140-146	168	16.7
150H	144-150	173	17.2
154H	148-154	177	17.2
158H	152-158	182	17.2
162H	156-162	186	17.8
166H	160-166	191	17.8
170H	164-170	195	17.8
174H	168-174	200	
178H	172-178	205	
182H	176-182	209	
186H	180-186	213	
190H	184-190	218	
194H	188-194	222	
198H	192-198	227	
202H	196-202	232	

CHART 27: EasyShoe Versa Grip Glue
(sizes 74F-150F, 90H-150H) &
EasyShoe Versa Grip Octo (sizes 102-150 only)

Front Sizes		
Size	Width (mm)	Length (mm)
74F	70-74	81
78F	74-78	85
82F	78-82	90
86F	82-86	95
90F	86-90	98
94F	90-94	102
98F	94-98	106
102F	96-102	110
106F	100-106	114
110F	104-110	119
114F	108-114	123
118F	112-118	128
122F	116-122	132
126F	120-126	136
130F	124-130	140
134F	128-134	145
138F	132-138	150
142F	136-142	154
146F	140-146	158
150F	144-150	163
Hind Sizes		
Size	Width (mm)	Length (mm)
90H	86-90	102
94H	90-94	106
98H	94-98	110
102H	96-102	115
106H	100-106	119
110H	104-110	124
114H	108-114	128
118H	112-118	133
122H	116-122	137
126H	120-126	142
130H	124-130	146
134H	128-134	151
138H	132-138	156
142H	136-142	160
146H	140-146	165
150H	144-150	170

CHART 28: EasyShoe Versa Grip Wedge

Front Sizes		
Size	Width (mm)	Length (mm)
114F	108-114	126
118F	112-118	131
122F	116-122	135
126F	120-126	139
130F	124-130	143
134F	128-134	148
138F	132-138	153
142F	136-142	157
146F	140-146	161
150F	144-150	166
Hind Sizes		
Size	Width (mm)	Length (mm)
114H	108-114	131
118H	112-118	136
122H	116-122	140
126H	120-126	145
130H	124-130	149
134H	128-134	154
138H	132-138	159
142H	136-142	163
146H	140-146	168
150H	144-150	173

CHART 29: EasyShoe Versa Grip Rocker

Front Sizes		
Size	Width (mm)	Length (mm)
114F	108-114	126
118F	112-118	131
122F	116-122	135
126F	120-126	139
130F	124-130	143
134F	128-134	148
138F	132-138	153
142F	136-142	157
146F	140-146	161
150F	144-150	166